

辨識我司產品 SOP SOP - Identification of IM product

目的 Purpose:

本流程介紹是為了辨別受測對象是否有使用我司（我是生物科技有限公司）之防黴產品 IM-8201，而開發的檢測方法。

This procedure is in order to introduce the detection method developed to identify whether the tested object has used IM-8201, the mildew proof product of our company (I M Biotechnology Co., LTD.) or not.

準備工具 Tools :

- 乾淨容器 Clean container
- 受測對象（待測產品）The tested object (Be testing product)
- 純淨水 Purified water
- 測試劑【 1 】 Test agent 1
- 測試劑【 2 】 Test agent 2
- 採樣瓶 The test bottle/ sampling bottle

※ 請在每次測試前，確認器具有保持乾淨，或是再次用純淨水沖洗後使用。

※ Please make sure the container is kept clean before each test, or please clean it again with pure water before use it.

辨識步驟 Procedure of test

1




請先準備 10 克 (毫升) 的純淨水
(非礦泉水) 至乾淨容器 (溫水更佳)
Pour 10cc of purified water (Non-mineral water) into a clean container. (Warm water is better)

2



將測試的產品取 5*5 大小面料
2 塊分別放入水中浸泡約 10 分鐘
Take 5*5 size fabrics for the tested object.
Soak 2 pieces each in water for about 10 minutes.

3

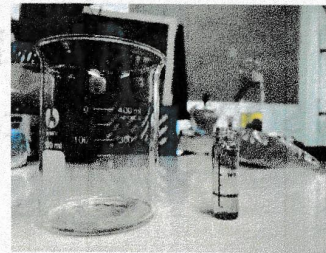

將測試對象拿出，浸泡後的液體取
5 克 (毫升) 倒入採樣瓶
Remove the test object and pour the 5g(ml) soaked liquid into one third of the test bottle.


4



加入測試劑【1】一滴

Add a drop of test agent 1 to the test bottle.

5

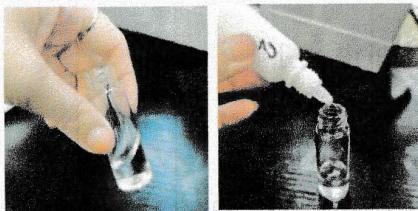

將液體搖晃均勻
加入測試劑【2】一滴

Shake the liquid evenly in the test bottle.
Add a drop test agent 2 to the test bottle.


6



搖晃均勻，標準等待結果時間為 1 分鐘

Shake evenly and standard waiting time is one minutes.

7

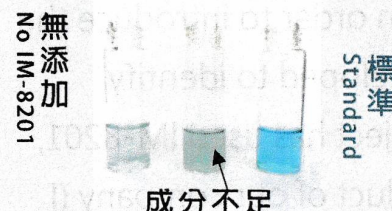

無添加
No IM-8201

成分不足

IM-8201 is insufficient

標準
Standard

液體含有我司足量的有效成分，將會呈現最右側的藍色

The liquid contains sufficient effective ingredients of IM, and the liquid will appear blue on the far right.

8

清洗工作
Cleaning work

建議沖洗 20 次以上

Please clean the container over 20 times.

檢測後請將所有器具清洗乾淨
避免殘留成分影響下次的檢測結果
Please clean all containers after testing.

Avoid residual components to affect the next test results.